

Annexure-B

The reading display parameters in normal mode of Single-Phase AMR Smart Energy Meters shall be programmed by default by the manufacturer as under.

LIST OF DISPLAY ITEMS IN SINGLE PHASE AMR SMART ENERGY METER	
NORMAL / AUTOMATIC DISPLAY MODE	
Sr. No.	Display Item
1	All Segments ON
2	Meter Serial Number
3	Date
4	Standard Time
5	Total Active Energy (kWh)
6	kWh Rate A / Tariff 1
7	kWh Rate B / Tariff 2
8	Total Reactive Energy (kVArh)
9	kVArh Rate A / Tariff 1
10	kVArh Rate B / Tariff 2
11	Maximum Demand (MDI) – kW
12	Maximum Demand Reset Date
13	Number of MDI Resets
14	Cumulative Maximum Demand – kW
15	Instantaneous Active Power – kW
16	Instantaneous Power Factor
17	Instantaneous Reactive Power – kVAr
18	Current – Phase A
19	Voltage – Phase A
20	Frequency – Hz
21	Current Tariff
22	Reverse Energy Flow Indication
25	Power Outage / Supply Status
26	Low Battery Indication, where applicable
27	Display Mode / Quantity Label

